

8. INDEX

A	
Air cleaner	6-24
Air conditioner & heater	3-21
Air conditioner filter	6-47
Axle oil	6-38
B	
Battery	6-44
Before starting engine	4-2
Belt tensioner	6-22
Boom kick out	4-20
Brake line filter	6-31
Bucket leveler	4-21
C	
Cab device	3-1
Charge air cooler	6-21
Cigar lighter	3-27
Cluster	3-2
Control device	3-19
Controller(MCU, TCU)	3-28
Coolant level	6-17
E	
Engine oil filter	6-15
Engine oil level	6-15
F	
Fan belt	6-21
Fault codes	3-11
Fuel filter	6-25
Fuel water separator	6-26
Fuse box	3-28
G	
Gear selector lever	3-19
H	
Hydraulic oil changing	6-30
Hydraulic oil filling	6-29
Hydraulic oil level	6-29
Hydraulic safety lock lever	3-20
L	
LCD	3-8
Loading and unloading	5-6
Lubrication	6-40
M	
Maintenance chart	6-13
Maintenance check list	6-10
Major components	2-1
Master switch	3-28
P	
Pilot line filter	6-31
R	
Radiator and oil cooler	6-21
Recommended lubricants	6-9
Return filter	6-30
Radio and cassette	3-24
S	
Safety hints	1-1
Safety labels	0-5
Seat	3-27
Specifications	2-2
Storage	4-24
Switches	3-13
T	
Tightening torque	6-5
Tire	6-32
Towing the machine	5-7
Transmission cold starting	4-5
Transmission oil filter	6-35
Transmission oil level	6-35
Transportation	5-1
Travelling machine	4-8
Troubleshooting guide	7-1
W	
Warming up operation	4-6
Weight	2-4
Working method	4-13